

Global Wall Mount Display Ceramic Dual Reflective


CONGRATULATIONS - you've made a smart move purchasing this powerful sales tool. To maximize its effectiveness, it's very important to assemble your display with precision and attention to detail. Imagine what prospects might think if they see dirt in the film, ragged cuts or crooked labels. The film on your new display must be perfect – just like your tint installations. Once assembled, place your new display in front of curious prospects in your office, a car dealership waiting room or next to the cashier at a high volume car wash.

Components

Your beautiful new display comes with everything you need to promote the Global window films you sell. Pre-assembled display includes:

- 1) Printed graphic base with Driver Benefits designed to guide presentations
- 2) Removable tempered glass panel
- 3) Glass panel attachments with felt
- 4) 6 wall mount standoffs and anchors
- 5) Clear acrylic brochure holder
- 6) 50-pack of series specific brochures
- 7) Product identification labels

Display dimensions, 23.5"x30"

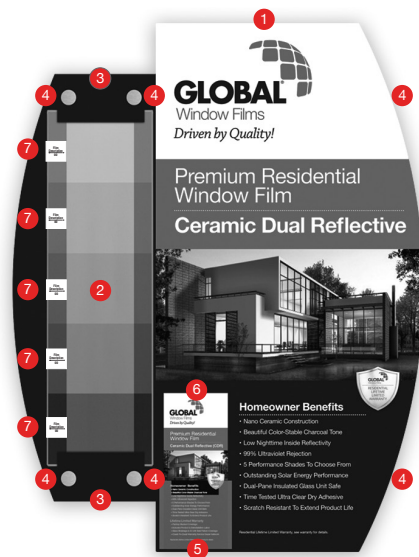

Tools Needed

- Drill & 1/8" Bit
- Phillips Screwdriver
- Pen or Pencil
- Level



Assembled display with brochure holder attached, film applied and product identification labels centered and balanced perfectly.

Assembly

- 1) Unscrew and remove the 6 wall mount standoffs from the printed graphic base. Also remove the glass panel attachment brackets.
- 2) Use the 6 holes in the printed graphic base as a template to position and level the display against the wall. Place a mark on the wall in the center of each of the 6 holes.
- 3) Drill holes using 1/8" bit. Insert wall mount anchors and attach standoff base with provided wall anchor screws.
- 4) Line up the printed graphic base over the standoff bases. Position the 2 glass panel attachment brackets and screw the standoff caps into the standoff bases to secure.
- 5) Remove double stick tape from acrylic brochure holder and position it on the face of the display as shown, 1/4" from left and 1/4" from bottom, press firmly.
- 6) Install the Global window films you sell to the glass panel and adjust widths accordingly.
- 7) Install the applicable product identification labels on glass, positioning them left and centered as shown.



Distributed & Serviced by



East Coast Service Center
22 Shelter Rock Lane #106
Danbury CT 06810

Direct 203.798.2211
Toll Free 800.FILM NOW (800.345.6669)
Fax 203.798.2253

www.filmnow.com